## SPECTITE from TC Ltd

ATEX / IECEx Approved Pressure and Vacuum Sealed Feedthroughs for Sensors, Probes, Electrodes and Wires







# ATEX / IECEx Approved Sealed Feedthroughs for Pressure and Vacuum Applications


**Spectite® Sealed Feedthroughs** sometimes called sealing glands, are used to seal elements under the most arduous conditions and have many applications in a wide variety of industries.

Our extensive range of ATEX / IECEx approved Spectite® fittings are designed and tested for use in hazardous areas allowing them to be used for both gas and dust applications in zones 1/2 and 20/21/22 areas with the following approval:

Ex II 2G 1D Ex db IIC Ex eb IIC Gb Ex ta IIIC Da

The feedthroughs are typically made from stainless steel and are designed for mounting on to an Ex db, Ex eb or Ex tD process vessel or enclosure. Versions can be specified to seal on both single and multiple elements of different types and sizes.

The feedthroughs are made from stainless steel and are designed for mounting on to a process vessel or enclosure. Versions can be specified to seal on both single and multiple elements of different types and sizes.

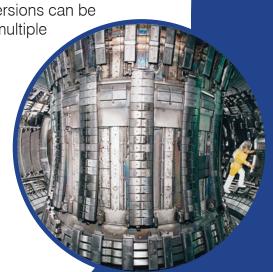



The cap nut is tightened to a pre-set torque to compress an internal sealant. The sealant provides an efficient pressure seal on the elements without damaging them. At the same time it restrains them from moving. Epoxy sealing is not used.

Details of the complete range of ATEX / IECEx approved Spectite® feedthrough assemblies can be found in this catalogue.



## **Contents**

Contents		Page
SPECTITE	Series PF for single probes, sensors, tubes and other similar elements.	4
SPECITIE	Series MF for multiple probes, sensors, tubes and other similar elements.	8
Secre	Series WF for multiple, bare or insulated wires and small diameter sensors.	12
SPECTIFE	Series HF high density, insulated wire, sealed tubes for mounting in Spectite® feedthroughs.	18
SPECTITE	Series EF with integral high voltage / current electrodes.	20
	Accessories Replacement sealants, parts and accessories, reducers and adaptors.	24
IECEX CONTINCATE  OF CONTINUATION  OF CO	General Specifications and Selection Guide	26


## Series PF Feedthroughs for Single Elements

These feedthroughs are designed for sealing single elements, usually sensors, probes or tubes, where they penetrate a pressure or environmental boundary.

Common applications include sealing sheathed thermocouples and resistance thermometers, small-bore tubes and other types of sensor where they enter a process enclosure.

Series PF feedthroughs seal elements from 0.5mm Ø to 25.4mm Ø. There are five body sizes (1 to 5) having 1/8", 1/4", 1/2", 3/4" and 1" process connections with BSPT (conical gas or DIN 2999 'R') and NPT threads along with ISO, SAE and UNF threads as shown in section 3.

Spectite® feedthroughs are designed for ease of assembly and installation. Elements can be adjusted, removed and replaced when not under pressure or vacuum conditions.

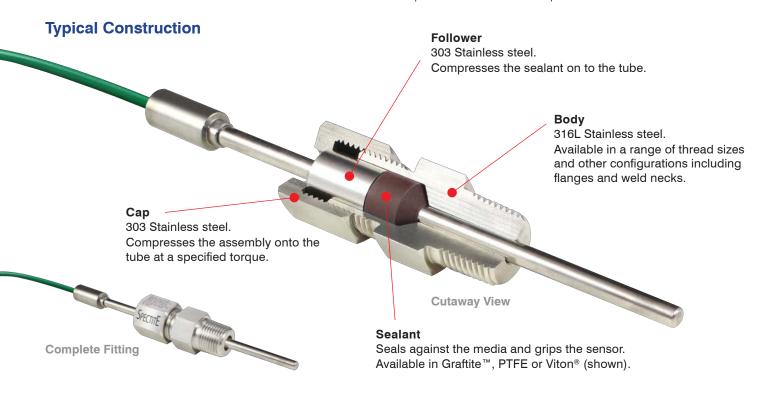

- ATEX/IECEx Approved to: Ex 2G 1D, Ex db IIC Gb / Ex eb IIC Gb, Ex ta IIIC Da
- Seal on probes, sensors, small-bore tubes and other similar elements
- Immersion length of the element can be easily adjusted as required
- Six sizes of feedthrough assembly

- Designed for easy installation of single elements 0.5mm to 25.4mm diameter
- Guide pressure range: Vacuum up to 700 bar
- Temperature range: -60°C to +450°C
- 316L Stainless steel wetted parts (see image above)
- Choice of three sealant materials
- Reusable fitting (dependant on sealant)

#### **Alternative Configurations**



#### Threaded Extension (B Cap)

Allows the gland to be terminated into the process as well as to a terminal head or conduit at the opposite end to the process. See section 4 for details.



Supplied without thread for permanent installation into the process by welding. Specify as 'WELD' for the thread size in the order code.





Section 1	Section 1 - Series PF Sealants									
Sealant Material	Code	Colour	Example	Operating Temperature Range	Re-usable	Material definition and properties				
Graftite™	G	Grey / Black	0	-60°C to +450°C (T1)	X	Graphite 98% purity. Impermeable to gases and liquids. Resistant to most media, not 'wetted' by molten metals or salts. Asbestos-free. No ageing or embrittlement. Good resistance to thermal shock. Conductive material (not electrically isolated).				
PTFE	Т	White	0	-60°C to +200°C (T3)	1	Polytetrafluoroethylene. FDA approved grade to Title 21-CFR 17. 1550 and is approved to US Pharmacopoeia Class VI. Has smooth, non-wetting, hydrophobic surfaces that resist biofilm buildup and the lowest coefficient of friction of any solid material. Low thermal transfer.				
Viton®	٧	Brown		-40°C to +200°C (T3)	1	Fluoroelastomer. Resists hydrocarbons, corrosive chemicals and petroleum. Solvent, acid and base resistant. Low permeation rate. Mechanically robust at high temperatures.				

Body Size Size 1 (1/8'			")	Size 2 (1/4")			Size 3 (1/2")			Size 4 (3/4")			Size 5 (1")			
	Sealant	G	Т	V	G	Т	v	G	Т	V	G	т	ν	G	Т	
Element S	Sizes (dia)									t material					ı	
inches	mm									d herein fo particular			ation			
0.020	0.5															
0.032	0.8		200	350												
0.040	1.0	450														
0.059	1.5		450	500	550	500										
0.062	1.59		150	500												
0.080	2.0															
0.118	3.0	400			700											
0.125	3.2		400			000	700									
0.157	4.0		100	550		200										
0.177	4.5	350			550				200	550						
0.187	4.76															
0.236	6.0							550								
0.250	6.35				450	80					550		400	400		
0.312	8.0											100			55	1
0.375	9.5								150	450	350		250			
0.393	10.0								100	350						
0.472	12.0							1	1	1				200		
0.500	12.7										300		200		45	4
0.625	15.88											75				
0.750	19.05										200		150			
0.839	21.3													100	30	2
1.00	25.4															

The guide pressures shown for each type of sealant are at 20°C. Spectite® feedthroughs from TC Ltd. have been designed to provide an efficient seal on the elements and restrain them from moving under pressure and vacuum. It is good installation practice to provide additional, mechanical restraint to the elements when differential pressure exceeds 50% of the feedthrough guide pressure value at 20°C. With an increase in temperature, a reduction in the maximum guide pressure value can be expected. These ratings are a guide and the suitability of any of the products described herein for a particular application is entirely at the discretion of the purchaser as being the best judge for that particular application.

2 Other types of process connection are available, see Section 3.

3 The element diameters shown are the common sizes routinely demanded for general industrial applications. Other sizes can be supplied between the minimum and maximum diameters shown.



#### Section 3 - Series PF Body Size and available Bore Sizes for all Thread Types - please refer to table for guide pressures in Section 2

Size 1 (1/8" Thread or equivalent)							
Standard Thread Sizes	Max. Tube Size						
1/8" BSPT, 1/8" BSPP, 1/8" NPT	4.76mm						
Alternative Thread Sizes	Max. Tube Size						
M8x1.0, 3/8" UNF-24	4.76mm						
M10x1.0, 7/16" UNF-24	4.76mm						
Standard Fitting							
13.0 32.5	13.0						
Fitting with Threaded Cap							
13.0 41.5	5						
Fitting with Weld Neck							
13.0	10.4						
Fitting with Weld Neck and Threaded Cap							
Secret Secret	10.4						


Size	<b>2</b> (1/4" Thread or equ	ivalent)
Standard	Thread Sizes	Max. Tube Size
1/4" BSPT, 1/4" E	SPP, 1/4" NPT	6.35mm
Alternativ	e Thread Sizes	Max. Tube Size
M10x1.0, 7/16" L	JNF-20	6.35mm
M12x1.5, 1/2" UI	VF-20	6.35mm
Standard Fitting		
	SpecialE	
	14.5	
19.0	52.0	19.0
Fitting with Thread	ed Cap	
	SPECIFIE	
	and the second	
	14.5	
_ 19.0 _	66.5	19.0
Fitting with Weld N	eck	7
	Specific 14	
	SPECIFIC 1	
	14.5	
19.0	52.0	19.0
Fitting with Weld N	eck and Threaded Cap	-
		14.0
	Securit	14.0

Standard	Thread Sizes	Max. Tube Size
1/2" BSPT, 1/2" B	SPP, 1/2" NPT	10.0mm
Alternativ	e Thread Sizes	Max. Tube Size
3/8" BSPT, 3/8" B	SPP, 3/8" NPT	10.0mm
M14x1.5, 7/16" S	AE-20, 9/16" UNF-18	10.0mm
	E-20, 5/8" UNF-18	10.0mm
M20x1.5, 9/16" S	AE-24, 3/4" UNF-16	10.0mm
Standard Fitting		
25.0	SPICE 20.0	25.0
Fitting with Threade	ed Cap	
25.0	20.0 87.5	25.0
Fitting with Weld N	eck	
25.0	20.0 + 67.5	22.0
Fitting with Weld N	eck and Threaded Cap	
25.0	20.0 a	22.0

Size 3 (1/2" Thread or equivalent)

Size 4 (3/4" Thread or equivalent)							
Standard Thread Sizes Max. Tube S							
3/4" BSPT, 3/4" BSPP, 3/4" NPT	19.05mm						
Alternative Thread Sizes	Max. Tube Size						
M22x1.5, 3/4" SAE-16, 7/8" UNF-14	19.05mm						
M24x2.0, 7/8" SAE-14, 1" UNF-14	19.05mm						

13.0

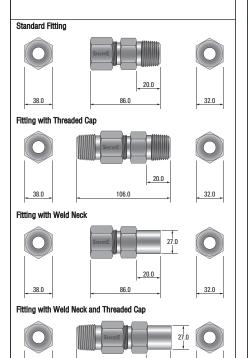

Standard Thread Sizes  1° BSPT, 1° BSPP, 1° NPT  Alternative Thread Sizes  M27x2.0, 1+3/16" SAE-12, 1° UNF-14  W33x2.0, 1+5/8" SAE-12, 1+1/8" UNF-14  Standard Fitting  Standard Fitting  Fitting with Threaded Cap  Fitting with Weld Neck	Max. Tube Size 25.4mm Max. Tube Size 25.4mm 25.4mm
Alternative Thread Sizes  M27x2.0, 1+3/16" SAE-12, 1" UNF-14  M33x2.0, 1+5/8" SAE-12, 1+1/8" UNF-14  Standard Fitting  Standard Fitting  110.0  Fitting with Threaded Cap  Fitting with Weld Neck	Max. Tube Size 25.4mm
M27x2.0, 1+3/16" SAE-12, 1" UNF-14 M33x2.0, 1+5/8" SAE-12, 1+1/8" UNF-14  Standard Fitting  Standard Fitting  20.0  110.0  Fitting with Threaded Cap  Fitting with Weld Neck	25.4mm
Standard Fitting  Standard Fitting  Fitting with Threaded Cap  Fitting with Weld Neck	
Standard Fitting	25.4mm
Fitting with Threaded Cap    50.8	
Fitting with Threaded Cap    50.8	
Sycaric 20  Sycaric 20  Fitting with Weld Neck	50.8
Fitting with Weld Neck	
Sreart	.0
50.8	34.0
Fitting with Weld Neck and Threaded Cap	
Special 20	34.0

Size 5 (1" Thread or equivalent)


Please note: The overall length will vary slightly depending on the sealant used and the tube size.

20.0



Section 4 - Series PF Cap Configuration									
Style A	Description	Style B	Description						
Standard	Standard Fitting with single thread for direct mounting into process.	Spectric	Standard Fitting with a Style B threaded extension for conduit/terminal head or enclosure connection. The thread form is the same as the process thread unless otherwise specified.  If a different thread form is required, please specify after the 'B' in the order code, for example:  PF1 – 1/8" BSPP – 1.5 – G – B NPT  If a B cap is used with a weld neck fitting, then the thread form must be specificied.						

Series PF Torque Settings - Max. values in Nm								
Process	Sealants							
Connection Size	G	Т	v					
Size 1 (1/8")	20	12	15					
Size 2 (1/4")	60	30	50					
Size 3 (1/2")	135	75	85					
Size 4 (3/4")	260	120	85					
Size 5 (1")	300	400	300					

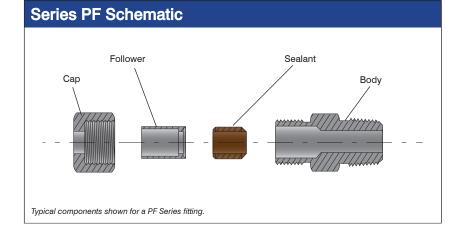

 $G = Graftite^{\tau_M}$ , T = PTFE,  $V = Viton^{\otimes}$ To convert:  $tt/|b| = Nm \times 0.738$ ;  $Kg/cm = Nm \times 10.2$ .

Series PF	Series PF - Order Code Examples										
Feedthrough Series	Feedthrough Size (see Section 3)		Process Connection (see Section 3)		Element Diameter (see Section 2)		Sealant (see Section1)		Cap Configuration (see Section 4)		Rating
PF	1	_	1/8" BSPT	_	3.0	_	٧	_	Α	_	EX
PF	2	-	1/4" NPT	-	1.5	_	G	_	В	_	EX
PF	3	_	M16x1.5	-	6.0	_	Т	_	Α	_	EX
PF	4	_	WELD	_	10.0	_	V	_	Α	_	EX




## Series MF Feedthroughs for Multiple Elements

A single access port into an enclosure or process vessel is all that is needed to allow multiple probes, sensors, etc., to pass through an environmental or pressure boundary using a single feedthrough assembly.

Series MF feedthroughs can seal multiple elements within a single assembly including typically up to  $40 \times 1.0$ mm  $\emptyset$ , up to  $12 \times 3.0$ mm  $\emptyset$  or up to  $4 \times 6.0$ mm  $\emptyset$  elements. Please refer to the table for further details of feedthrough capacity and sizes of elements.

There are five body sizes having 1/8", 1/4", 1/2", 3/4" and 1" process connections in either BSPT (conical gas or DIN 2999 'R') and NPT threads.

Spectite® feedthroughs are designed for ease of assembly and installation. Elements can be adjusted, removed and replaced when not under pressure or vacuum conditions.

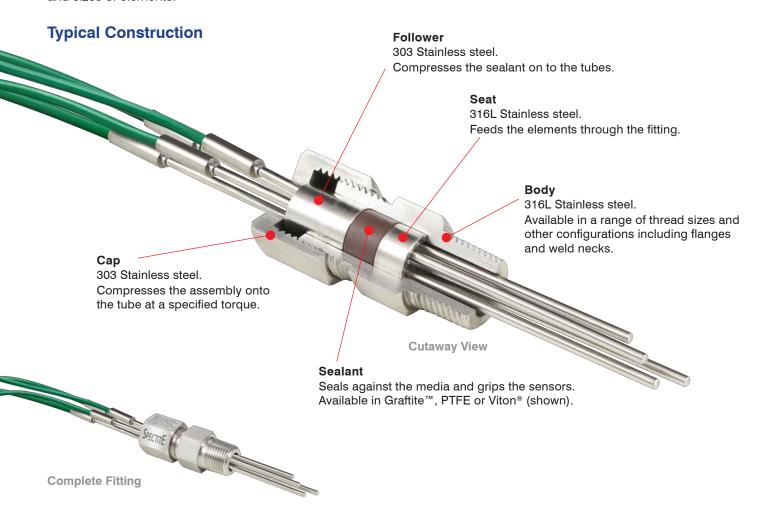

- ATEX/IECEx Approved to: Ex 2G 1D, Ex db IIC Gb / Ex eb IIC Gb, Ex ta IIIC Da
- Saves time and costs by allowing multiple sensors to pass through one feedthrough fitting
- Immersion length of each element can be easily adjusted as required
- Five sizes of feedthrough assembly
- Designed for carrying multiple elements 0.5mm to 9.53mm diameter

- Suitable for a mixture of sizes and types of elements
- Guide pressure range: Vacuum up to 700 bar
- Temperature range: -60°C to +450°C
- 316L Stainless steel wetted parts (see above)
- Choice of three sealant materials
- Reusable fitting dependant on sealant



#### **Alternative Configurations**



#### Threaded Extension (B Cap)

Allows the gland to be terminated into the process as well as to a terminal head or conduit at the opposite end to the process. See section 4 for details.



Supplied without thread for permanent installation into the process by welding. Specify as 'WELD' for the thread size in the order code.

Section 1	- Seri	es MF S	ealants			
Sealant Material	Code	Colour	Example	Operating Temperature Range	Re-usable	Material definition and properties
Graftite™	G	Grey / Black	1	-60°C to +450°C (T1)	Х	Graphite 98% purity. Impermeable to gases and liquids. Resistant to most media, not 'wetted' by molten metals or salts. Asbestos-free. No ageing or embrittlement. Good resistance to thermal shock. Conductive material (not electrically isolated).
PTFE	Т	White	6	-60°C to +200°C (T3)	1	Polytetrafluoroethylene. FDA approved grade to Title 21-CFR 17. 1550 and is approved to US Pharmacopoeia Class VI. Has smooth, non-wetting, hydrophobic surfaces that resist biofilm buildup and the lowest coefficient of friction of any solid material. Low thermal transfer.
Viton®	٧	Brown		-40°C to +200°C (T3)	1	Fluoroelastomer. Resists hydrocarbons, corrosive chemicals and petroleum. Solvent, acid and base resistant. Low permeation rate. Mechanically robust at high temperatures.


Section	2 - Serie	es Mi	F Bo	dy Siz	ze, Pr	essure	Guid	e 1 ar	nd ava	ailable	Bore	Sizes	for E	SPT, E	SPP	and I	NPT 1	Threads	2		
	Body Size		Siz	ze 1 (1/8	3") <sup>3</sup>		Siz	ze 2 (1/	4")		Siz	ze 3 (1/	2")		Siz	ze 4 (3/	4")		s	ize 5 (1	")
	Sealant	No. of Elements	G	Т	٧	No. of Elements	G	Т	٧	No. of Elements	G	Т	٧	No. of Elements	G	Т	٧	No. of Elements	G	Т	٧
Element S	Sizes (dia)					value (in															
inches	mm					the purc									аррисс	1011					
0.020	0.5						300		250												
0.032	0.8	2 to 4	400	250	250	4 to 8	300	250	230												
0.040	1.0		100	200	200	1100		200		4 to 16				8 to 40		300					
0.059	1.5											250	450				400				
0.062	1.59					2 to 6	500	200	500	4 to 12				8 to 28	550						
0.080	2.0										700					250					
0.118	3.0							450		0.4- 4		000	050	4 to			050	8 to	000	100	450
0.125	3.2					2		150		2 to 4		200	350	12			350	24	200	100	150
0.177	4.5									2		150	250	2 to 4				4 to 0			
0.187	4.76														250	150	200	4 to 8			40
0.236	6.0													2 to 4	350	150	300	O to C	150	70	40
0.250	6.35																	2 to 6	150	70	
0.315	8.0																	O to 4			00
0.375	9.53	1																2 to 4			20


<sup>1</sup> The guide pressures shown for each type of sealant are at 20°C. Spectite® feedthroughs from TC Ltd. have been designed to provide an efficient seal on the elements and restrain them from moving under pressure and vacuum. It is good installation practice to provide additional, mechanical restraint to the elements when differential pressure exceeds 50% of the feedthrough guide pressure value at 20°C. With an increase in temperature, a reduction in the maximum guide pressure value can be expected. These ratings are a guide and the suitability of any of the products described herein for a particular application is entirely at the discretion of the purchaser as being the best judge for that particular application. Other types of process connection are available, see Section 3.





<sup>2</sup> Other types of process connection are available.
3 Our Size 1 range utilises different internal parts.

#### Section 3 - Series MF Body Size and available Bore Sizes for all Thread Types - please refer to table for guide pressures in Section 2

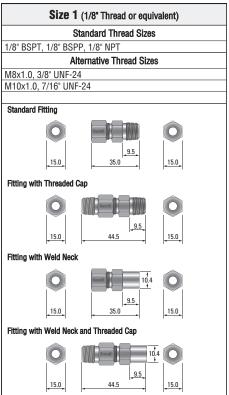

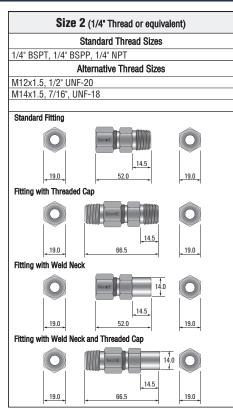

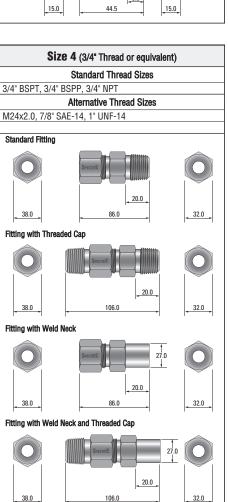

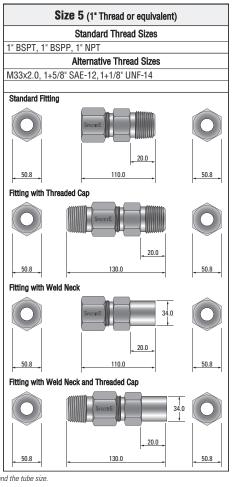


Size 3 (1/2" Thread or equivalent) Standard Thread Sizes 1/2" BSPT, 1/2" BSPP, 1/2" NPT **Alternative Thread Sizes** 3/8" BSPT, 3/8" BSPP, 3/8" NPT M16x1.5, 1/2" SAE-20, 5/8" UNF-18 M20x1.5, 9/16" SAE-24, 3/4" UNF-16 Standard Fitting 20.0 28.5 Fitting with Threaded Cap 28.5 25.0 87.5 Fitting with Weld Neck 25.0 Fitting with Weld Neck and Threaded Cap 20.0 28.5 25.0 87.5


Please note: The overall length will vary slightly depending on the sealant used and the tube size.



Section 4 - Series MF (	Cap Configuration		
Style A	Description	Style B	Description
Standard	Standard Fitting with single thread for direct mounting into process.	Spectric	Standard Fitting with a Style B threaded extension for conduit/terminal head or enclosure connection. The thread form is the same as the process thread unless otherwise specified.  If a different thread form is required, please specify after the 'B' in the order code, for example:  MF3 – 1/2" BSPT – 1.5 – 8 – G – B NPT  If a B cap is used with a weld neck fitting, then the thread form must be specificied.

<b>Series MF</b> Torque S	ettings -	Max. valu	es in Nm
Process		Sealants	
Connection Size	G	Т	v
Size 1 (1/8")	40	30	35
Size 2 (1/4")	50	35	40
Size 3 (1/2")	165	115	125
Size 4 (3/4")	260	150	175
Size 5 (1")	400	250	350

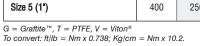

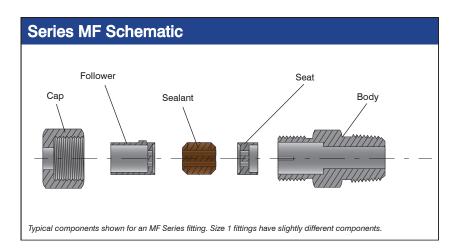

Series Mi	- Order C	ode	Examples										
Feedthrough Series	Feedthrough Size (see Section 3)		Process Connection (see Section 3)		Element Diameter (see Section 2)		No. of Elements ee Section 2)	,	Sealant (see Section1)		up Configuration see Section 4)		Rating
MF	1	_	1/8" BSPT	_	1.0	_	2	_	V	_	Α	_	EX
MF	2	_	1/4" NPT	_	1.5	_	4	_	Т	_	В	_	EX
MF	3	_	1/2" BSPT	_	3.2	_	2	_	L	_	Α	_	EX
MF	4	-	WELD	-	6.0	-	4	_	G	_	Α	_	EX



## Series WF Feedthroughs for Multiple Wires & Probes


When multiple wires must pass through a pressure boundary, series WF feedthroughs can provide an efficient seal without recourse to epoxies or other non-adjustable fixture methods.

Different types of these assemblies may be specified according to the type of element required to pass through the feedthrough. Series WF assemblies cater for up to 12 bare or insulated wires - sizes from 24AWG (0.2mm<sup>2</sup>) to 8AWG (approx. 8.8mm<sup>2</sup>).

Ceramic insulators within WF feedthrough assemblies protect bare wires and provide additional isolation for Kapton® insulated wires. These are rated max. 55A @ 600Vdc/850Vac max. Feedthroughs with power wires can be supplied as complete assemblies, ready for installation, with wires cut to specified lengths.

WF feedthroughs can also accommodate up to 12 small diameter sensor elements that must be electrically isolated from each other.

#### **Typical Construction**

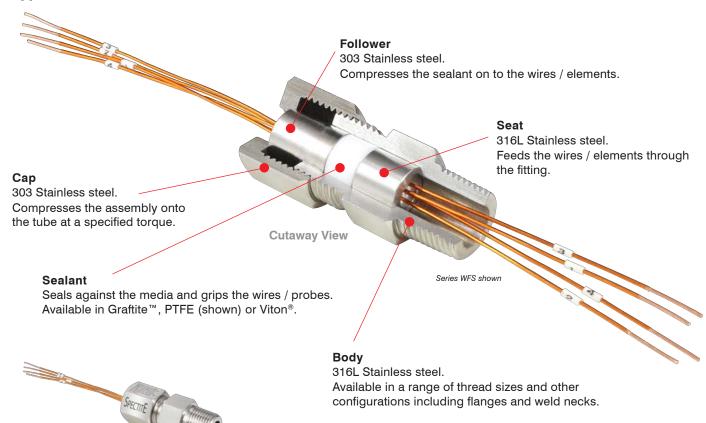

ATEX/IECEx Approved to: Ex 2G 1D, Ex db IIC Gb / Ex eb IIC Gb, Ex ta IIIC Da

**Complete Fitting** 


- Seal on Kapton® insulated copper or thermocouple wires - type WFS
- Seal on PFA/PTFE insulated copper or thermocouple wires - type WFT
- Seal on bare wires carrying instrumentation voltages – type WFR
- Seal on small diameter sheathed sensors, max. 3.2mm dia. - type WFP
- High temperature glands using ceramic insulators - type WFRH / WFPH

- Guide pressure range: Vacuum up to 700 bar
- Temperature range: -60°C to +450°C
- 316L Stainless steel wetted parts (see above)
- Choice of sealant materials
- WF glands use ceramic insulators to isolate the sensors from all metal contact
- Individual wires can be replaced without complete disassembly
- Reusable fitting sealant and internal components replaceable - see page 24





## Feedthroughs for Multiple Wires & Probes Series WF

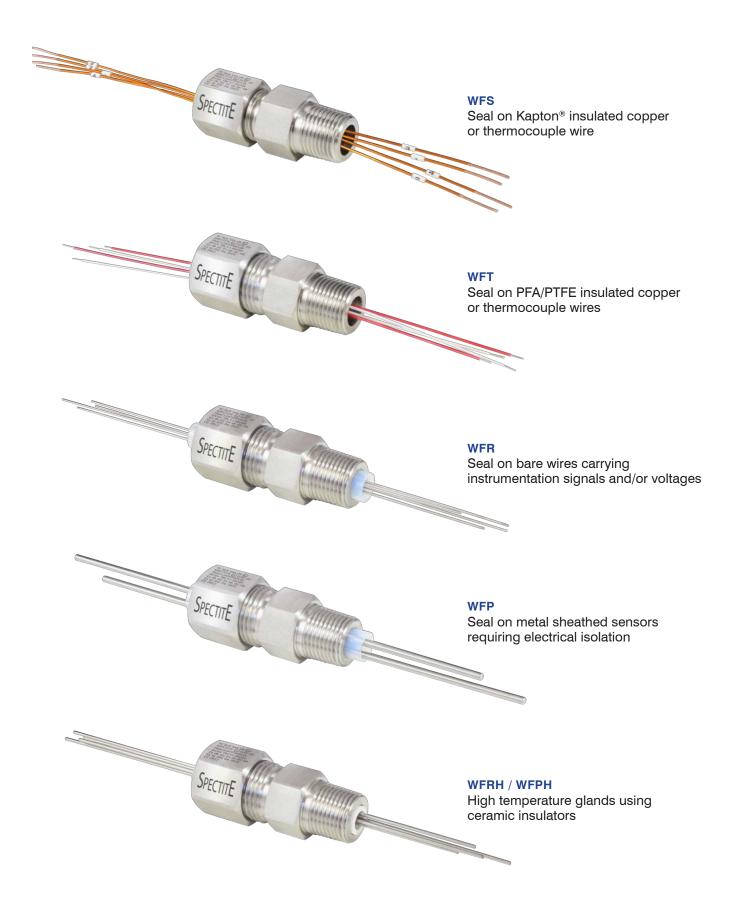



#### **Alternative Configurations**



#### Threaded Extension (B Cap)

Allows the gland to be terminated into the process as well as to a terminal head or conduit at the opposite end to the process. See section 4 for details.



Supplied without thread for permanent installation into the process by welding. Specify as 'WELD' for the thread size in the order code.

Section 1	- Seri	es WF S	ealants			
Sealant Material	Code	Colour	Example	Operating Temperature Range	Re-usable	Material definition and properties
Graftite™	G	Grey / Black		-60°C to +450°C (T1)	X	Graphite 98% purity. Impermeable to gases and liquids. Resistant to most media, not 'wetted' by molten metals or salts. Asbestos-free. No ageing or embrittlement. Good resistance to thermal shock. Conductive material (not electrically isolated).
PTFE	Т	White	6	-60°C to +200°C (T3)	✓	Polytetrafluoroethylene. FDA approved grade to Title 21-CFR 17. 1550 and is approved to US Pharmacopoeia Class VI. Has smooth, non-wetting, hydrophobic surfaces that resist biofilm buildup and the lowest coefficient of friction of any solid material. Low thermal transfer.
Viton®	٧	Brown	•	-40°C to +200°C (T3)	✓	Fluoroelastomer. Resists hydrocarbons, corrosive chemicals and petroleum. Solvent, acid and base resistant. Low permeation rate. Mechanically robust at high temperatures.

	a - Body Size							zes for	BSPT	, BSPP a	and Ni	T Thr	eads <sup>2</sup>				
	Body Size		S	ize 1 (1/8	S")		S	ize 2 (1/4	<b>!</b> ")		s	ize 3 (1/2	2")		s	ize 4 (3/4	<b>4"</b> )
	Sealant	No. of Elements	G*	Т	٧	No. of Elements	G*	Т	٧	No. of Elements	G*	Т	٧	No. of Elements	G*	Т	٧
Wire	Size					e (in bar) at suitability of											
AWG	diam. (mm)					urchaser as							аррисац	1011			
24 Cu or T/C	0.5mm	2, 4	300	250	250	2, 4	300	250	250								
20 Cu or T/C	0.8mm																
18 Cu	1.0mm									2, 4	700	250	450	6, 8 12			
16 Cu	1.3mm													,-			
14 Cu	1.6mm													4, 6	550	250	350
12 Cu	2.0mm													8			
10 Cu	2.5mm													2, 4			
8 Cu	3.2mm													3			

Series WFS feedthroughs are supplied with Kapton® insulated copper or thermocouple material wire to specified lengths, if required. The wires are fitted in the feedthrough, both ends of each wire, or Thermocouple pair, are identified with numbered markers and the feedthrough is torqued ready for installation.

#### Current ratings for Kapton® insulated copper wire:

Wire Size (AWG)	24	20	18	16	14	12	10	8
Max. current rating (A) at 230°C 600V AC / 850V DC max.	5	9	13	17	24	30	40	55



	<b>b -</b> Body Size, <b>-T -</b> PFA insul						Sizes	for <b>BS</b>	PT, BSPI	P and	NPT Th	ireads	2			
	Body Size   Size 1 (1/8")   Size 2 (1/4")   Size 3 (1/2")   Size 4 (3/4")															
	Sealant	No. of Elements	Т	٧	No. of Elements	G*	Т	٧	No. of Elements	G*	Т	٧	No. of Elements	G*	Т	٧
Wire	Size								ach sealant i described h							
AWG	diam. (mm)								e for that pa				Callon			
<b>24 Cu or T/C 0.5mm</b> 2, 4 250 250 2, 4 300 250 250																
20 Cu or T/C	<b>20 Cu or T/C 0.8mm</b> 2, 4 700 250 450 6, 8 12 550 250 350															

Series WFT feedthroughs are supplied with PFA insulated copper or thermocouple material wire to specified lengths, if required. The wires are fitted in the feedthrough, both ends of each wire, or Thermocouple pair, are identified with numbered markers and the feedthrough is torqued ready for installation.

<sup>2</sup> Other types of process connection are available, please contact us for details.

	- Body Size, Pres l - Bare wires, <b>W</b>										150°C rate	d	
	Body Size		Size 1	(1/8")		Size 2	(1/4")		Size 3	3 (1/2")		Size 4	(3/4")
	Sealant	No. of Elements	T	٧	No. of Elements	T	٧	No. of Elements	Т	V	No. of Elements	T	٧
WFR Wire Sizes (AWG)	WFP Element dia (mm)	These rating	ıs are a gu	ide and the	e suitability of	any of the	products	ch sealant ma described her e for that parti	ein for a p	articular a <sub>l</sub>			
24	0.5												
20	0.8												
18	1.0	2, 4	250	250	2, 4	250	250	2, 3 4, 6 8	250	450			
14	1.5							2, 4			6, 8, 12		
8	3.0										2, 4	250	350
0	3.2										2, 4		
6	4.0										3	80	100

<sup>1</sup> The guide pressures shown for each type of sealant are at 20°C. Spectite® feedthroughs from TC Ltd. have been designed to provide an efficient seal on the elements and restrain them from moving under pressure and vacuum. It is good installation practice to provide additional, mechanical restraint to the elements when differential pressure exceeds 50% of the feedthrough guide pressure value at 20°C. With an increase in temperature, a reduction in the maximum guide pressure value can be expected. These ratings are a guide and the suitability of any of the products described herein for a particular application is entirely at the discretion of the purchaser as being the best judge for that particular application.


2 Other types of process connection are available, please contact us for details.





<sup>\*</sup> Graftite™ sealants are conductive. Extra care must be taken where high voltages are present. Please contact TC Ltd for further guidance.


1 The guide pressures shown for each type of sealant are at 20°C. Spectite® feedthroughs from TC Ltd. have been designed to provide an efficient seal on the elements and restrain them from moving under pressure and vacuum. It is good installation practice to provide additional, mechanical restraint to the elements when differential pressure exceeds 50% of the feedthrough guide pressure value at 20°C. With an increase in temperature, a reduction in the maximum guide pressure value can be expected. These ratings are a guide and the suitability of any of the products described herein for a particular application is entirely at the discretion of the purchaser as being the best judge for that particular application.

#### Section 3 - Series WF Body Size and available Bore Sizes for all Thread Types - please refer to table for guide pressures in Section 2

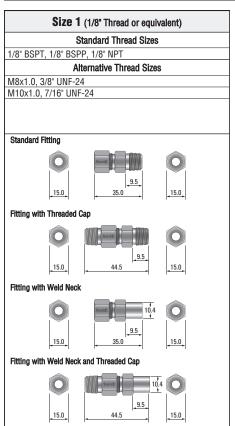

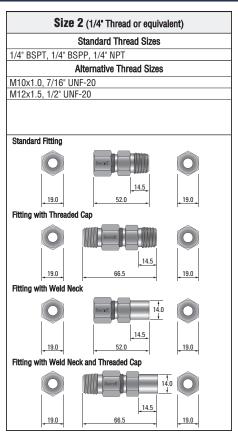

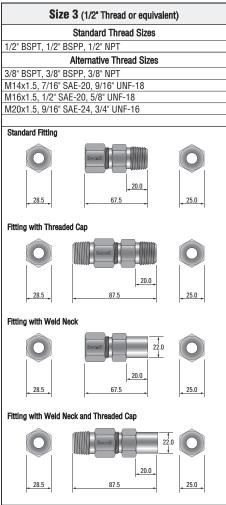

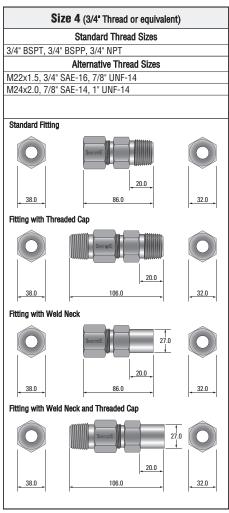


Please note: The overall length will vary slightly depending on the sealant used and the tube size.



Section 4 - Series WF (	Cap Configuration		
Style A	Description	Style B	Description
Standard	Standard Fitting with single thread for direct mounting into process.	Specific	Standard Fitting with a Style B threaded extension for conduit/terminal head or enclosure connection. The thread form is the same as the process thread unless otherwise specified.  If a different thread form is required, please specify after the 'B' in the order code, for example:  WFP3 – 1/2" BSPT – 1.0 – 8 – V – B NPT  If a B cap is used with a weld neck fitting, then the thread form must be specificied.

Series WF Torque S	ettings	- Max. valu	es in Nm
Process		Sealants	
Connection Size	G	Т	٧
Size 1 (1/8")	40	30	35
Size 2 (1/4")	50	35	40
Size 3 (1/2")	165	115	125
Size 4 (3/4") up to 8 Cu	260	150	175
Size 4 (3/4") 6 Cu	-	180	100

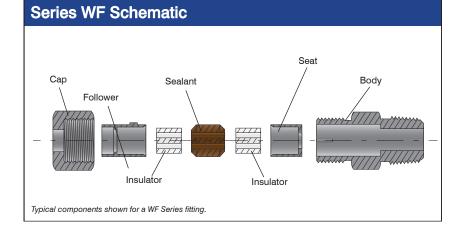

 $G = Graftite^{TM}$ , T = PTFE,  $V = Viton^{\otimes}$ To convert:  $ft/lb = Nm \times 0.738$ ;  $Kg/cm = Nm \times 10.2$ .

Series	WF - (	Orc	ler Code Exa	ımp	les												
Feedthrough Series	Feedthroug Size (see Sec. 3		Process Connection (see Section 3)		Element Diameter (see Sec. 2)		No. of Elements (see Sec. 2)	) (:	<b>Sealant</b> see Sec.	- 1	<b>Cap</b> (see Sec.	4)	Wire Length CAP SIDE		Wire Length PROCESS SIDE		Rating
WFS	2	_	1/4" BSPT	_	24K	_	4	_	V	_	Α	_	1200mm	_	1200mm	_	EX
WFR	4	_	3/4" NPT	_	14 <sub>AWG</sub>	_	12	_	Т	_	В	_	not applicable	_	not applicable	_	EX
WFT	2	_	1/4" BSPT	_	24K	_	4	_	Т	_	Α	_	800mm	_	800mm	_	EX
WFP	3	_	1/2" BSPT	_	1.0	_	8	_	L	_	Α	_	not applicable	_	not applicable	_	EX
WFS	4	_	WELD	_	<b>14</b> cu	_	8	_	G	_	Α	_	1000mm	_	1000mm	_	EX

Note: if no wire length is specified in the part code fitting will be supplied as WFR/WFP type (without wires).




## Series HF High Density Sealed Tubes

An FEP lined, stainless steel tube is swaged over multiple, insulated, single-core copper and/or thermocouple material wires to make a continuous wire, high-density, sealed feedthrough tube with up to 60 wires. These are used for thermocouples, resistance thermometers and low voltage instrumentation. The sealed tube assembly is usually mounted in a Series PF or MF feedthrough. Series HF

feedthroughs are manufactured with customer-specified wire lengths.

Epoxies and other sealants are not used in the construction of HF feedthroughs. sealed tubes. They are suitable for use where outgassing is not permitted. The thermocouple pairs are available with or without junctions. Please contact us for further details.

#### **Typical Construction**

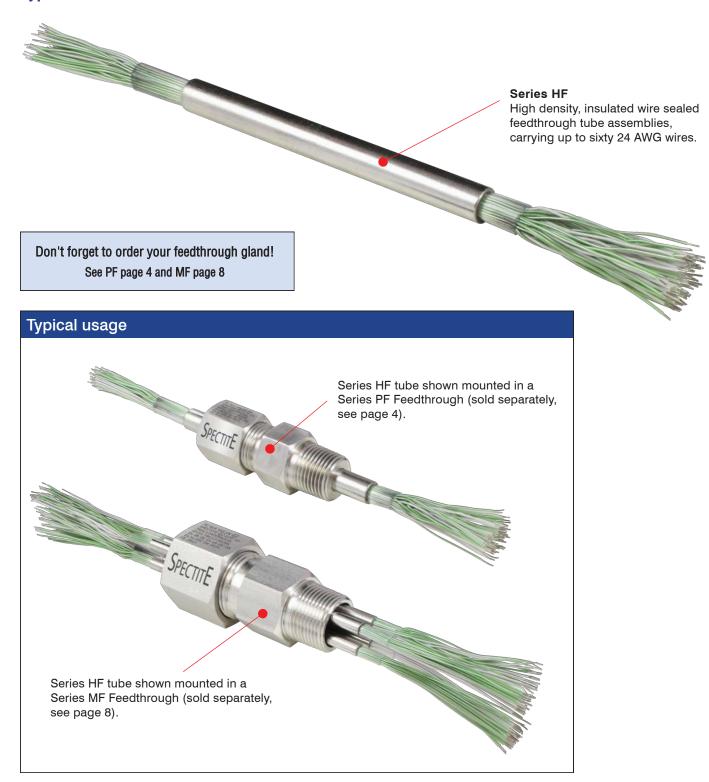



## Series HF High Density Sealed Tubes

- ATEX/IECEx Approved to:
   Ex 2G 1D, Ex db IIC Gb /
   Ex eb IIC Gb, Ex ta IIIC Da (using PF/MF fitting)
- Single tube assembly mounts in a series PF feedthrough, sold separately - see page 4
- Multiple tubes mount in a series MF feedthrough, sold separately - see page 8
- Saves time and costs by allowing multiple sensor wires to pass through a feedthrough as a single element
- Sealed tubes with continuous, multiple, insulated conductors

- Stainless steel tube (316L) is sealed without potting, epoxies or glues
- Copper or thermocouple-material wires
- Max. current rating per wire 500mA at 100Vdc
- Guide pressure range: Vacuum up to 350 bar with low leak rate
- Temperature rating: -40°C to +125°C
- 4 tube sizes carrying 12, 24, 40 or 60 size 24AWG copper or thermocouple material wires

	Thermocouple Pair	s	RTD	Wires	Standard Copper 'Triples'				
Pairs bunched and numbered as pairs.			Wires bunched ar Triples or Quads.		Wires bunched as'triples' with each triple numbered and containing 1 red, 1 white and 1 other colour as shown below.				
Thermocouple	IEC 60584.3	ANSI MC96.1	3 wire	4 wire	Number of Wires	12 wire	24 wire	40 wire	60 wire
Туре	IEC	ANSI	RTD3	RTD4	Part Code	STD	STD	STD	STD
К	Green	Yellow	Red	Red	Triple 1	Yellow	Yellow	Yellow	Yellow
N.	White	Red	Red	Red	Triple 2	Blue	Blue	Blue	Blue
Т	Brown	Blue	White	White	Triple 3	Black	Black	Black	Black
'	White	Red		White	Triple 4	Green	Green	Green	Green
_	Black	White			Triple 5		Brown	Brown	Brown
J	White	Red			Triple 6		Lilac	Lilac	Lilac
N	Pink	Orange			Triple 7		Orange	Orange	Orange
N	White	Red			Triple 8		Pink	Pink	Pink
R/S	Orange	Black			Triple 9			Yellow	Yellow
n/o	White	Red			Triple 10			Blue	Blue
E	Purple	Lilac			Triple 11			Black	Black
E	White	Red			Triple 12			Green	Green
					Triple 13			Brown	Brown
	Instrument Pairs				Triple 14				Lilac
Pairs bunched and	d numbered as pair	s.			Triple 15				Orange
Material	Part Code	Colours			Triple 16				Pink
Conner	CU2	Red			Triple 17				Yellow
Copper	602	White			Triple 18				Blue
Other colour comb	binations are availab	ole - please contact			Triple 19				Black
TC Ltd for more in:		•			Triple 20				Green

Series H	Series HF - Order Code Examples												
Feedthrough Type		No. of wires and Material <sup>2</sup> (see above)		Wire Length CAP SIDE 1 (specify to nearest 100mm, minimum 500mm)		Wire Length PROCESS SIDE 1 (specify to nearest 100mm, minimum 500mm)		Colour Code (see above)					
HF24	_	24Cu	_	1000mm	/	2500mm	_	RTD3					
HF24	_	12Cu, 12J	-	1000mm	/	2000mm	-	STD - IEC					
HF40	_	40K	_	1000mm	/	2800mm	_	IEC					

<sup>1</sup> The wire lengths on each side of the sealed tube are the lengths of wire specified and do not include the length of the metal tube. Dimensions of the sealed tube are shown in the table below.
2 The number of wires refers to the total number of single wires, both copper and thermocouple wires passing through each size of sealed tube. Each series HF assembly can be specified, if required, with a combination of copper wires and thermocouple pairs.

In the second example 4 triples of copper wire and 6 type-J thermocouple pairs are specified – total 24 wires. When configuring these combinations of wires it is essential to verify that the total number of wires specified equals the possible number of wires for the size of tube assembly required, remembering that each thermocouple pair is two wires.



Number of Wires / Tube Dimensions (mm)										
Type HF12 HF24 HF40 HF60										
Number of Wires	12	24	40	60						
Tube diameter (mm)	4.5	6.0	8.0	10.0						
<b>Tube length (mm)</b> 80 100 100 100										

## Series EF High Voltage Electrode Feedthroughs (2kV)


The integral electrode mounted in these feedthroughs enables specifiers to pass voltages up to 2kV in process enclosures, autoclaves, vacuum furnaces and reactor vessels to power heaters, electric motors and other devices needing high power supply.

Feedthroughs are available with three sizes of copper electrodes rated 40A, 100A and 200A at 2kV maximum. Stainless steel which has a lower current rating than copper electrodes, can be specified instead of copper.

Feedthroughs with copper electrodes have brass nuts and washers. Stainless steel nuts and washers are fitted to stainless steel and nickel electrodes.

Series EF sealed electrode assemblies are supplied pretorqued for immediate installation. Integral insulators are made from ceramic.

#### **Typical Construction**

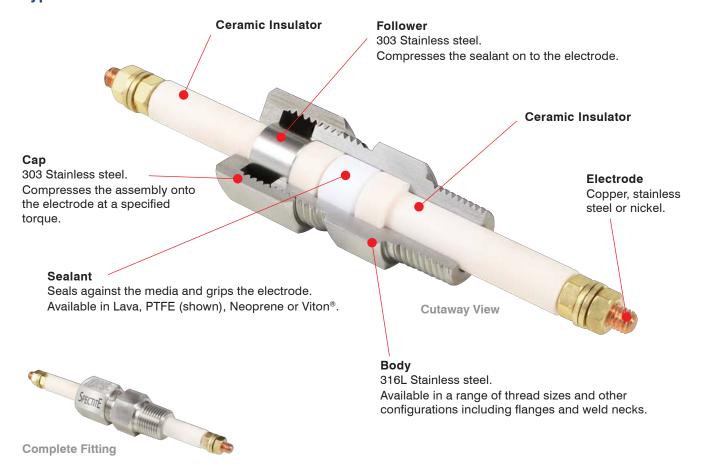

- ATEX/IECEx Approved to: Ex 2G 1D, Ex db IIC Gb / Ex eb IIC Gb, Ex ta IIIC Da
- Integral Ceramic insulators
- Copper or stainless steel electrodes
- Three sizes of feedthrough assembly
- Rated for use at 2kV at up to 200A

- Guide pressure range: Vacuum up to 400 bar
- Choice of 2 sealant materials
- Temperature range: -60°C to +200°C
- Maintainable internal components replaceable
- Electrodes pre-installed in feedthrough and torqued ready for installation



#### **Alternative Configurations**



#### Threaded Extension (B Cap)

Allows the gland to be terminated into the process as well as to a terminal head or conduit at the opposite end to the process. See section 4 for details.



Supplied without thread for permanent installation into the process by welding. Specify as 'WELD' for the thread size in the order code.

Section 1	Section 1 - Series EF Sealants												
Sealant Material	Code	Colour	Example	Operating Temperature Range	Re-usable	Material definition and properties							
PTFE	Т	White		-60°C to +200°C (T3)	1	Polytetrafluoroethylene. FDA approved grade to Title 21-CFR 17. 1550 and is approved to US Pharmacopoeia Class VI. Has smooth, non-wetting, hydrophobic surfaces that resist biofilm buildup and the lowest coefficient of friction of any solid material. Low thermal transfer.							
Viton®	V	Brown		-40°C to +200°C (T3)	1	Fluoroelastomer. Resists hydrocarbons, corrosive chemicals and petroleum. Solvent, acid and base resistant. Low permeation rate. Mechanically robust at high temperatures.							

Section 2 - Body Size, Pressure Guide <sup>1</sup> and available Bore Sizes for BSPT, BSPP and NPT Threads <sup>2</sup> Series EF -Maximum voltage rating 2kV											
Body Size Size 2 (1/4") Size 3 (1/2") Size 4 (3/4")											
		Sealant	Т	V	Т	V	Т	٧			
Voltage Rating				kV	2	kV	21	kV			
Electrode Material	Electrode Current Ratings	Electrode dia. (mm)	The table indicates the available electrode sizes for each feedthrough body size.  The maximum guide pressure value (in bar) at 20°C is shown for each sealant material according to electrode size <sup>1</sup> . These ratings are a guide and the suitability of any of the products described herein for a particular application is entirely at the discretion of the purchaser as being the best judge for that particular application.								
Copper 316 Stainless Steel	40A 10A	3.2	350	550							
Copper 316 Stainless Steel	100A 15A	6.35	150 400								
Copper 316 Stainless Steel	200A 30A	12.7					150	150			

<sup>1</sup> The guide pressures shown for each type of sealant are at 20°C. Spectite® feedthroughs from TC Ltd. have been designed to provide an efficient seal on the electrode and restrain them from moving under pressure and vacuum. It is good installation practice to provide additional, mechanical restraint to the electrode when differential pressure exceeds 50% of the feedthrough guide pressure value at 20°C. With an increase in temperature, a reduction in the maximum guide pressure value can be expected. These ratings are a guide and the suitability of any of the products described herein for a particular application is entirely at the discretion of the purchaser as being the best judge for that particular application.



<sup>2</sup> Other types of process connection are available, see Section 3.


#### Section 3 - Series EF Body Size and available Bore Sizes for all Thread Types - please refer to table for guide pressures in Section 2

Size 2 (1/4' Thread or equivaler	nt)
Standard Thread Sizes	Electrode Diameter
1/4" BSPT, 1/4" BSPP, 1/4" NPT	
Alternative Thread Sizes	
M10x1.0, 7/16" UNF-20	3.2mm
M12x1.5, 1/2" UNF-20	
Standard Fitting	I
28.5 52.0 14.5 13.5 94.0 125.0	19.0
Fitting with Threaded Cap	
14.0 14.5 66.5 14.5 13.5 94.0 125.0	19.0
Fitting with Weld Neck	·
28.5 52.0 14.5 13.5 14.0 94.0 125.0	19.0
Fitting with Weld Neck and Threaded Cap	·
14.0 14.5 66.5 13.5 14. 94.0 125.0	19.0

Size 4 (3/4" Thread or equivaler	nt)
Standard Thread Sizes	Electrode Diameter
3/4" BSPT, 3/4" BSPP, 3/4" NPT	
Alternative Thread Sizes	
M22x1.5, 3/4" SAE-16, 7/8" UNF-14	12.7mm
M24x2.0, 7/8" SAE-14, 1" UNF-14	
Standard Fitting	
43.0 86.0 20.0 33.0 162.0 215.0	32.0
Fitting with Threaded Cap	
38.0 Socrete 106.0 20.0 33.0 106.0 20.0 33.0 215.0	0, 32.0
Fitting with Weld Neck	
43.0 86.0 20.0 33.0 162.0 215.0	27.0
Fitting with Weld Neck and Threaded Cap	
23.0 20.0 106.0 20.0 33.	
38.0	32.0

Please note: The overall length will vary slightly depending on the sealant used and the tube size.




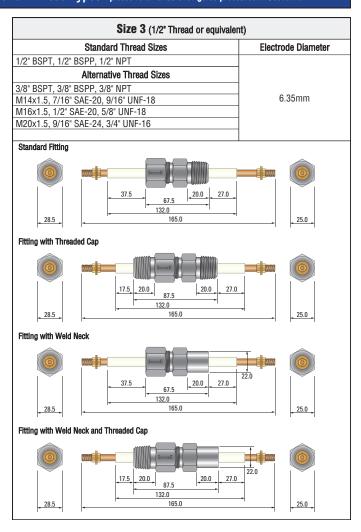

Section 4 - Series EF Cap Configuration											
Style A	Description	Style B	Description								
Standard	Standard Fitting with single thread for direct mounting into process.	SPECTIFE	Standard Fitting with a Style B threaded extension for conduit/terminal head or enclosure connection. The thread form is the same as the process thread unless otherwise specified.  If a different thread form is required, please specify after the 'B' in the order code, for example:  EF3 – 1/2" BSPT – CU – T – B NPT  If a B cap is used with a weld neck fitting, then the thread form must be specificied.								

Series EF Torque Settings - Max. values in Nm									
Process	Sealants								
Connection Size	Т	V							
Size 2 (1/4")	40	45							
Size 3 (1/2")	60	65							
Size 4 (3/4")	75	100							

T = PTFE,  $V = Viton^{\otimes}$ To convert:  $ft/lb = Nm \times 0.738$ ;  $Kg/cm = Nm \times 10.2$ .

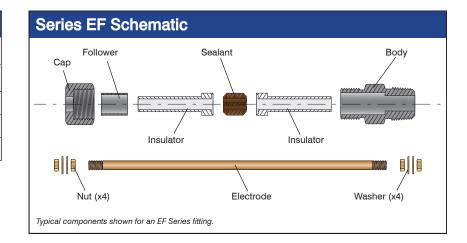

Series EF	Series EF - Order Code Examples										
Feedthrough Series	Feedthrough Size (see Section 3)		Process Connection (see Section 3)		Electrode (CU, 316 or NI)		Sealant (see Section1)		Cap Configuration (see Section 4)		Flange Details (only available with a weld neck)
EF	2	_	1/4" BSPT	_	CU	_	V	_	Α	_	EX
EF	2	_	1/4" BSPT	_	316	_	Т	_	В	_	EX
EF	2	-	M12 x 1.5	_	CU	_	V	_	В	_	EX
EF	4	_	WELD	_	316	_	Т	_	В	_	EX



## Accessories

# RS - Replacement Sealants For use with PF, MF, PSF, MSF, MSFD, WF, EF, BSF and ASF feedthroughs Code Description Order Code Example Note To specify a replacement sealant, please prefix the original order code of the feedthrough assembly for which the part is required by: RS. RS-PF2-6.0-V RS-MF3-3.0-4-T Blank (undrilled) sealants are also available. When a blank sealant is required, the word 'Blank' should be inserted in the order code instead of an element diameter. Feedthroughs with blank sealants are not pressure rated.

	RP - Set of Replacement Internal Components For use with PF, MF, PSF, MSF, MSFD, WF, BSF and ASF feedthroughs											
Code	Description Feedthrough Series Internal Component List Order Code Examples											
	To specify a complete set of replacement parts, please	PF	Follower and sealant	RP-PF2-6.0-V								
RP	prefix the original order code of the feedthrough assembly for which the part is required by: <b>RP</b> for a set of internal components.	MF	Follower, sealant and seat	RP-MF3-3.0-4-T								
		WF	Follower, Seat, 2x insulators and sealant	RP-WFP2-1.0-8-L								

	RI / RE - Replacement Insulators and Electrodes For use with EF, EFT and EFP feedthroughs											
Code	de Description Feedthrough Series Internal Component List Order Code Examples											
RI	To specify replacement insulators or electrodes, please prefix the original order code of the feedthrough assembly for which the part is required by:  RI for a pair of insulators	EF	Pair of ceramic insulators	RI-EF2								
RE	<b>RE</b> for a replacement electrode (with nuts and washers) available in either copper, stainless steel or nickel - see part code examples	EF	Copper (CU), stainless steel (316) or nickel (NI) electrode with nuts and washers	RE-EF2-CU								

<b>TA</b> - '	Thread Seal Tape					
Code	Description	Order Code	Material	Tape Thickness	Reel Length	Temperature Range
		TA-PTFE20	PTFE	0.2mm	10 metres	-185°C to +250°C
		TA-PTFE30	PTFE	0.3mm	10 metres	-185°C to +250°C
TA	Use of mounting thread seal tapes assists the efficiency	TA-PTFE50	PTFE	0.5mm	10 metres	-185°C to +250°C
I IA	of tapered threads in to the process.	TA-GRA20	Graftite™	0.2mm	10 metres	-200°C to +500°C
		TA-GRA30	Graftite™	0.3mm	10 metres	-200°C to +500°C
		TA-GRA50	Graftite™	0.5mm	10 metres	-200°C to +500°C

TL - Thread Lubricant			
Code	Description	Order Code	
TL	Applied to feedthrough bodies, followers and caps when a feedthrough is opened so that elements or sealants can be replaced or elements adjusted. Speclube Lubricant is available in handy 10ml bottles with applicator brushes.  Order as Speclube Thread Lubricant.	TL-10	



## Notes





### General Specifications

The technical data and guideline information presented in this publication is provided in good faith; however, no warranty, express or implied, is given whatsoever as to its accuracy and no liability is accepted for any errors or omissions. The suitability of any of the products described herein for a particular application is entirely at the discretion of the purchaser as being the best judge for that particular application.

Spectite® sealed feedthrough assemblies from TC Ltd. have been designed to be easy to install and can be maintained. Sealants and other internal parts are replaceable so that fittings can be re-used over and over again. If elements need replacement or adjustment, the feedthrough cap can be undone - after the pressure or vacuum in the vessel has been released - to allow movement or removal of all or individual elements.

#### **Guide Pressure Values**

The pressure and temperature ratings and typical leak rates quoted are given for guidance only. Pressure values vary with temperature and sealant used. With an increase in temperature, a reduction in the maximum guide pressure value can be expected. Contact TC Ltd. for further details. The BSPT and NPT mounting thread guide pressure value is the same or is higher than the feedthrough guide pressure value.

Spectite® feedthroughs from TC Ltd. have been designed to provide an efficient seal on the elements and restrain them from moving under pressure and vacuum. It is good installation practice to provide additional, mechanical restraint to the elements when differential pressure exceeds 50% of the feedthrough guide pressure value at 20°C. (Not applicable to series EF feedthroughs with integral electrodes). Consult TC Ltd. for further guidance on guide pressure values.

Feedthroughs with Graftite, Neoprene, PTFE and Viton sealants are suitable for vacuum applications to  $5 \times 10^6$  torr (6.67 x  $10^4$  Pa or 6.67 x  $10^6$  mbar). Lava sealants are not suitable for vacuum applications.

#### Leak rates

A typical leak rate for Spectite® feedthrough assemblies with Graftite, Neoprene, PTFE and Viton sealants is better than or equal to 1 x  $10^{-6}$  scc/sec. under 1 Atm. He @  $20^{\circ}$ C. (1 Atm. =  $9.87 \times 10^{4}$  Pa or 987.2 mbar).

#### Ordering information

Feedthrough and sealed tube assemblies are specified for ordering by a simple composite description that includes the type of feedthrough, the size of the feedthrough body (defined by the size of the process connection), the size of the element(s) to pass through the feedthrough, the number of elements (not applicable to series PF & PSF for single elements) and the sealant material.

An example of a typical order code for a feedthrough for multiple sensors (8 x 1.5mm dia. probes):

MF3 - 1/2" BSPT - 1.5mm - 8 - T - B

If a feedthrough is required with a cap with a threaded conduit extension, the word Cap and the threadform required is added to the end of the order code, as shown in shadow in the example above.

Order code arrangements for feedthroughs for multiple wires and with integral electrodes include additional parameters. Further details are given in the order code information for each series.

For assistance with specifying and ordering Spectite® feedthrough assemblies, particularly where there are high temperatures, high pressures or difficult application environments, contact TC Ltd.

#### Replacement parts and thread lubricant

Sealants and other internal components for Spectite® feedthrough assemblies are available as replacement parts. To specify the component needed, prefix the order code of the feedthrough assembly for which the part is required by: **RS** for a replacement sealant; **RP** for a set of internal components, (i) for series MF feedthroughs comprising follower, sealant and seat, or (ii) for series WF feedthroughs comprising two internal insulators and sealant; **RI** for a pair of insulators for series EF feedthroughs; **RE** for a replacement electrode (with nuts and washers) for series EF.

A lubricant is applied to feedthrough bodies, followers and caps during assembly in our factory. It helps to prevent these component parts from binding and minimises friction between mating surfaces. Each time a feedthrough assembly is opened so that elements or sealants can be replaced or elements adjusted, re-application of lubricant is recommended. Speclube Lubricant is available from TC Ltd. in handy 10ml bottles with applicator brushes. Order as Speclube Thread Lubricant.

#### **Process connections**

Feedthrough bodies can be specified with a choice of threaded process connections. Feedthroughs with the common tapered threadforms, BSPT (conical gas thread or 'R' thread) to BS21, DIN 2999 ISO 7/1 & JIS B0203; and NPT (national pipe tapered thread) to ANSI/ASME B1.20.1 are generally stocked items

Feedthroughs with parallel threaded process connections, BSPP (parallel gas thread or 'G' thread) to BS2779, DIN ISO 228/1 & JIS B0202; and ISO metric to DIN13, may also be specified. Feedthroughs with parallel mounting threads need an 'O' ring or a gasket seal (not supplied) to prevent leakage at the process connection.

Feedthroughs without process connection threads may be specified for welded mounting and with a fitted flange from a range of styles including ISO-KF and - CF types for the vacuum industry and general applications as well as Triclover® and triclamp types for the food and pharmaceutical industries.

Custom engineered assemblies can be designed and made to meet customers' specific application requirements.

#### Caps

Plain, hexagonal caps are available for all sizes of feedthrough. Additionally, caps with a threaded extension for a conduit connection are also available. Specifiers may choose **NPT**, **BSPP** (parallel gas thread) or **BSPT** (conical gas thread). These caps can be specified for feedthroughs with 1/4", 1/2" & 3/4" process connections. Cap threads are the same size as the corresponding feedthrough body process connection.

#### Pressure Equipment Directive (PED)

Spectite® sealed feedthroughs have been classified as 'Piping', satisfying the requirements of the category of Sound Engineering Practice (SEP), according to the European Pressure Equipment Directive (PED) 97/23/EC. The PED does not require the 'CE' symbol to be identified on Pressure Equipment that is categorised as SEP. Caps are marked SPECTITE on one of the hexagon faces.

#### Feedthrough component materials

Spectite® feedthrough bodies, followers, seats and series EF SS electrodes are manufactured in an austenitic stainless steel UNS S31603, commonly designated 316L. Equivalent grades are: (UK) BS 316 S11; (Germany) W.-Nr. 1.4404, DIN CrNiMo 17.13.2; (France) AFNOR Z2 CND 17.12; (Italy) UNI X2 CrNiMo 17.12; (Sweden) SS2353; (USA) AISI 316L; (Japan) JIS SUS 316L. The typical chemical composition for this steel is 0.03%C, 16.0-18.0%Cr, 10-14%Ni, 2.0-3.0%Mo, 0.10%N. Caps are manufactured in 303 stainless steel (W.-Nr. 1.4305 / UNS S30300)

When 316L is unsuitable for an application, the 'wetted' metal parts of feedthroughs, that come into contact with a process, can be manufactured in other stainless grades or other materials such as Hastelloy® and Inconel® grades, Monel® R-405 or mild (carbon) steel. There may be minimum manufacturing requirements for feedthroughs in 'exotic' materials.

Insulators in series WF feedthroughs with 1/8" process connections and in series EF feedthroughs are manufactured in high-purity recrystallised Alumina (Aluminium Oxide  $Al_2O_3$ ).

External, single-bore insulators in series WF feedthroughs are manufactured in aluminous porcelain. Internal insulators are manufactured in a high-performance, engineering plastic for use at temperatures up to +230°C or machineable glass ceramic for use up to +870°C.

Electrical conductors for Series EF feedthroughs are made in grade C101 copper or 316L stainless steel (as above). Nuts and washers on copper conductors are brass, stainless steel conductors have stainless steel nuts and washers.

The lubricant used on feedthrough components is Chlorotrifluoroethylene Polymer (PCTFE). A copy of the Safety Data Sheet is available on request. Spectite® feedthroughs should not be degreased before installation.

Spectite® is a registered trademark of Spectite Ltd.

Kapton® is a registered trademark of E.I. du Pont de Nemours and Company

Viton® is a registered trademark of DuPont Performance Elastomers

Hastelloy® is a registered trademark of Haynes International, Inc.

Inconel® and Monel® are registered trademarks of the Special Metals


Corporation group of companies

Triclover® is a registered trademark of Alfa-Laval AB



## Selection Guide

## to choosing the correct feedthrough for your application

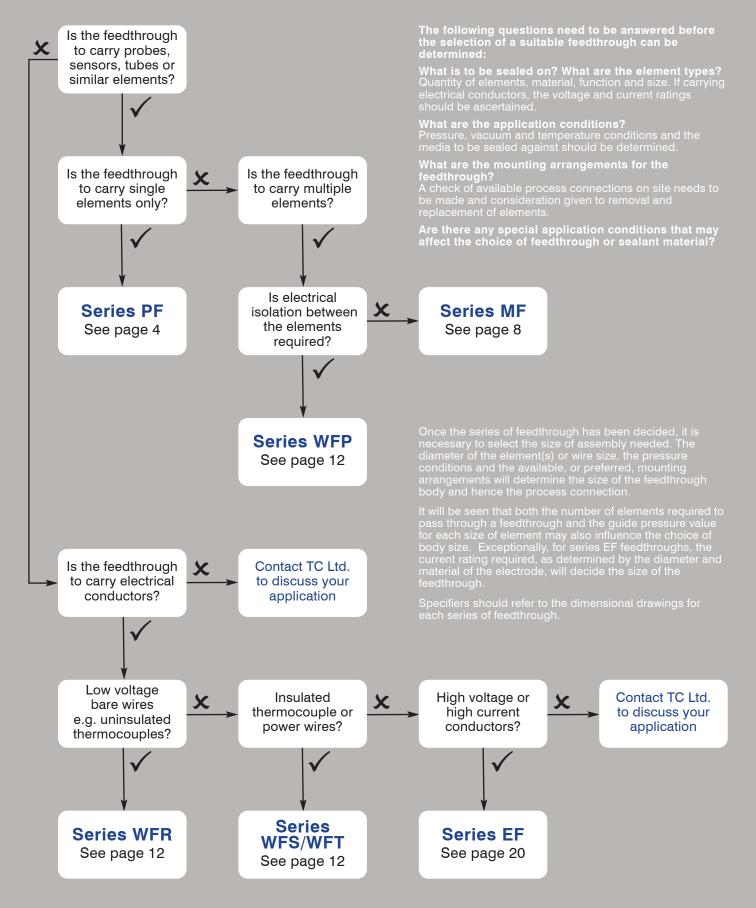



## **SPECTITE**®

from TC Ltd PO Box 130 Uxbridge UB8 2YS United Kingdom

Tel: +44 (0)1895 252222

Email: info@tc.co.uk, Web: www.tc.co.uk

